

PROMASEAL® Retrofit Floor Waste Collar Plastic Pipe Penetration Seals Through Concrete Floor



For Promat Asia Pacific Organisation • October 2012



Up to -/240/180 fire resistance in accordance with the requirements of BS 476: Part 20: 1987 and AS 1530: Part 4: 2005, insulation criteria will vary depending on type and sizes of the pipes, and the type of penetrating elements

- PROMASEAL® Retrofit Floor Waste Collar
- Pixing with suitable steel masonry anchor
- uPVC plastic piping
- 4 Floor waste grate
- 6 Masonry or concrete floor slab

Dimensions Guide

Code no.			FWR 100		
uPVC pipe nominal mm diameter			100		
Body	Н	mm	70		
	D1	mm	110		
	D2	mm	167		
Flange	D3	mm	209		



Waste Collar

PROMASEAL® Retrofit Floor Waste Collar

PROMASEAL® Retrofit Floor Waste Collars are surface mounted (retrofit) collars that provide integrity and insulation criteria when tested to AS 1530: Part 4 and AS 4072: Part 1: 2005 for uPVC floor waste traps of 50mm, 80mm and 100mm diameters, all using the FWR 100 type.

Installation Guide

These collars are manufactured using Promat intumescent technology, designed to provide fire resistance where floor wastes penetrate wet areas. The collar has been tested with 100mm, 80mm and 50mm uPVC pipes (in the appropriate thickness slab) and achieved an FRL up to -/240/180.

Unclip the collar at the joint and pull apart the two sections far enough that the collar can be placed around the pipe. Close the collar and re-clip. Fix the collar to the floor slab with minimum 4 pieces of 35mm x 6.5mm steel masonry anchors. The cloth skirt seen inside the collar must be pulled down to its full extent.

The FWR 100 type collar is designed to accommodate pipe fittings within the body of the collar.

Typical Specification

Where plastic pipes used for stack systems are to be fire resistant, use PROMASEAL® Retrofit Floor Waste Collars as tested to AS 1530: Part 4: 2005 and AS 4072: Part 1: 2005 to maintain the FRL of the element. All work to be certified in an approved manner.



For latest information of the Promat Asia Pacific organisation, please refer to www.promat-ap.com.

ASIA PACIFIC HEADQUARTERS

Promat International (Asia Pacific) Ltd.

Unit 19-02-01, Level 2 PNB Damansara No.19 Lorong Dungun, Damansara Heights 50490 Kuala Lumpur

MALAYSIA

Tel: +60 (3) 2095 5111 Fax: +60 (3) 2095 6111 Email: info@promat-ap.com

AUSTRALIA

Promat Australia Pty. Ltd.

1 Scotland Road

Mile End South, SA 5031
Tel: 1800 PROMAT (776 628)
Fax: +61 (8) 8352 1014
Email: mail@promat.com.au

New South Wales Office Promat Australia Pty. Ltd.

Unit 1, 175 Briens Road Northmead, NSW 2152

Tel: 1800 PROMAT (776 628) Fax: +61 (2) 9630 0258 Email: mail@promat.com.au

Victoria Office

Promat Australia Pty. Ltd.

Suite 205, 198 Harbour Esplanade

Docklands, VIC 3008

Tel: 1800 PROMAT (776 628) Fax: 1800 334 598 Email: mail@promat.com.au

Queensland Office

Promat Australia Pty. Ltd.

1/68 Lisgar Street Virginia, QLD 4014 Tel: 1800 011 376 Fax: 1800 334 598 Email: mail@promat.com.au

CHINA

Promat China Ltd.

Room 506, Block A, Qi Lin Plaza

13-35 Pan Fu Road 510180 Guangzhou

Tel: +86 (20) 8136 1167 Fax: +86 (20) 8136 1372 Email: info@promat.com.cn

Beijing Office

Promat North China

(Division of Promat China Ltd.)

Room 1507 Building 5, SOHO Xiandaicheng No.88 Jianguo Road, Chaoyang District

100022 Beijing

Tel: +86 (10) 8589 1254 Fax: +86 (10) 8589 2904 Email: info@promat.com.cn

For Promat International and its worldwide group, see www.promat-international.com.

- The technical data provided in this publication is based on mean values
 prevalent at time of publication and is thus subject to fluctuation. It
 should not be regarded as a guarantee to system performance.
- All data contained herein conforms to and frequently surpasses generally accepted fire protection standards recognised by most professional fire science practitioners and regulatory authorities worldwide. The same general principle is equally applicable to all Promat products and systems. Promat has access to a considerable body of test authentication data and this can be provided on a complimentary basis upon request. It should be noted however that this publication replaces all previous editions in its entirety. Any form of reproduction by any means—manual, electronic, digital or otherwise—is strictly prohibited and subject to prior approval in writing from Promat. All rights related or connected to the Promat logo, Promat registered trademarks, featured illustrations, written information and technical reports in this publication are the sole, exclusive and copyright property of Promat and its legal partner companies.

HONG KONG

Promat International (Asia Pacific) Ltd.

Room 1010, C.C. Wu Building 302-308 Hennessy Road

Wanchai

Tel: +852 2836 3692 Fax: +852 2834 4313

Email: apromath@promat.com.hk

INDIA

Promat International (Asia Pacific) Ltd.

(India Representative Office) 610-611, Ansal Imperial Tower

C-Block, Community Centre Naraina Vihar, Naraina New Delhi 110028

Tel: +91 (11) 2577 8413 Fax: +91 (11) 2577 8414 Email: info-india@promat-asia.com

Bangalore Office

Promat International (Asia Pacific) Ltd.

(India Representative Office)

Cabin No. BC-10

Oculus Workspaces, No.66/1, 2nd Floor

Coles Road, Frazer Town Bangalore 560005

Tel: +91 (80) 4031 4151 Fax: +91 (80) 4125 2135 Email: info-india@promat-asia.com

MALAYSIA

Promat (Malaysia) Sdn. Bhd.

Unit 19-02-01, Level 2 PNB Damansara No.19 Lorong Dungun, Damansara Heights

50490 Kuala Lumpur Tel: +60 (3) 2095 8555 Fax: +60 (3) 2095 2111 Email: info@promat.com.my

SINGAPORE

Promat Building System Pte. Ltd.

10 Science Park Road, #03-14 The Alpha

Singapore Science Park II Singapore 117684 Tel: +65 6776 7635 Fax: +65 6776 7624 Email: info@promat.com.sg

SOUTH KOREA

Promat International (Asia Pacific) Ltd. (Korea Branch Office)

Room 406, 811-2

Yeoksam-dong Gangnam-gu

Seoul 135080

Tel: +82 (70) 7794 8216 Email: apromath@promat.com.hk

Your local Promat supplier